


assembly

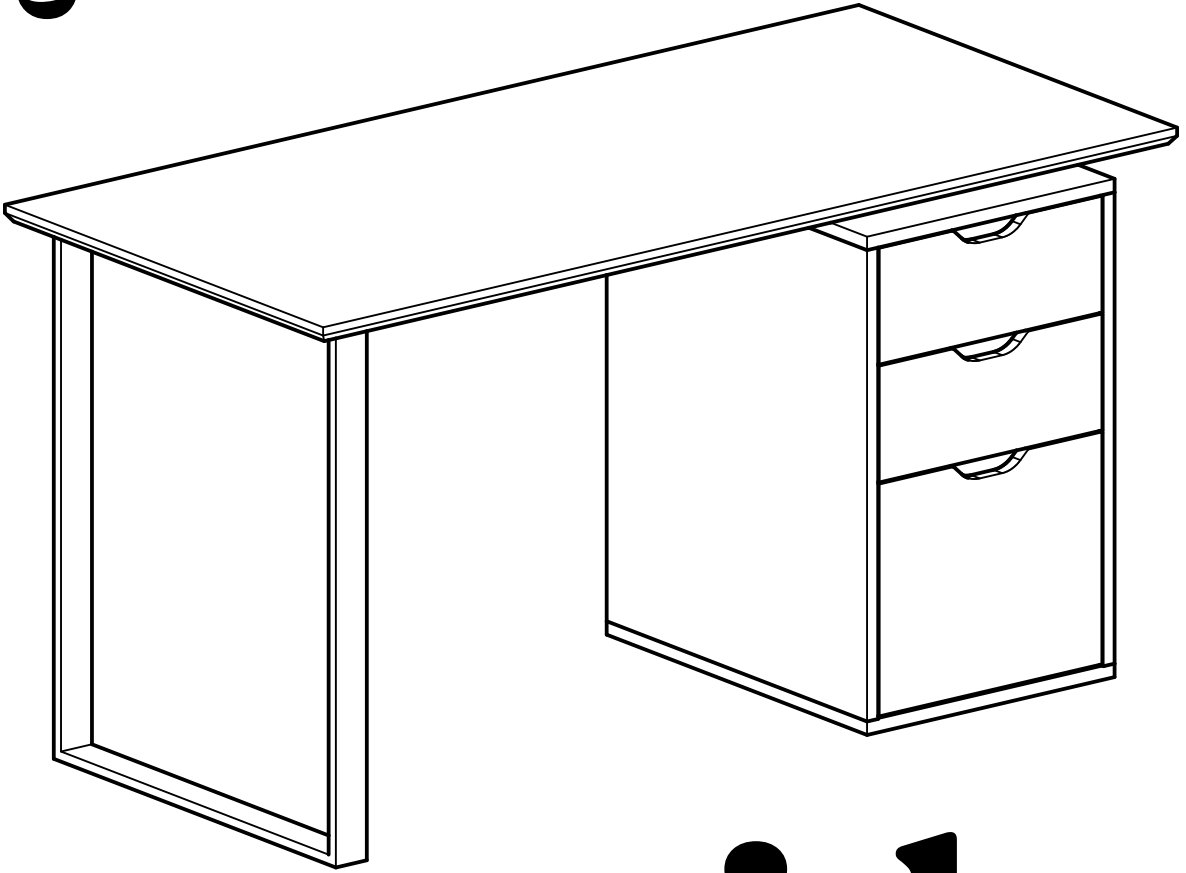






ida

T-12092020







T Design Studio of TURKEY

general advice

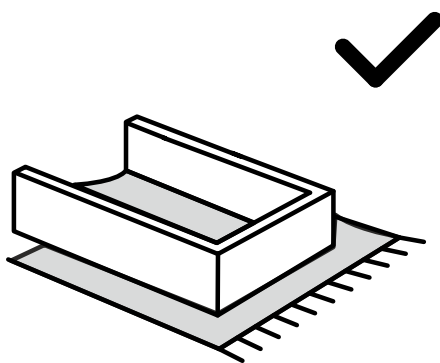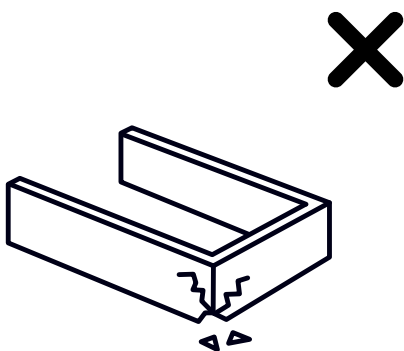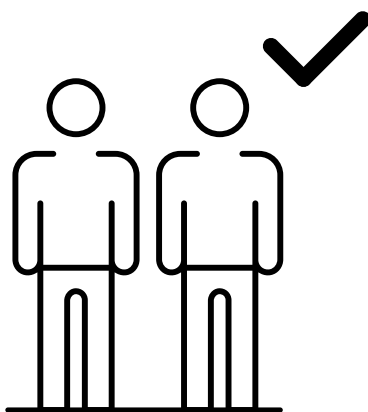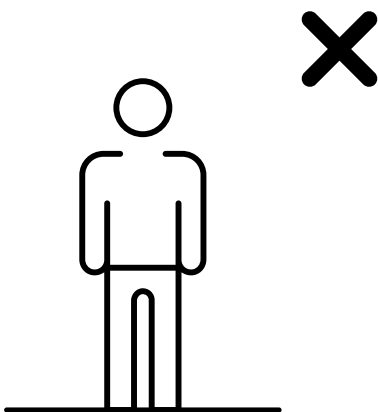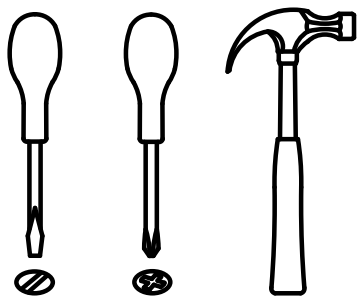


accessories

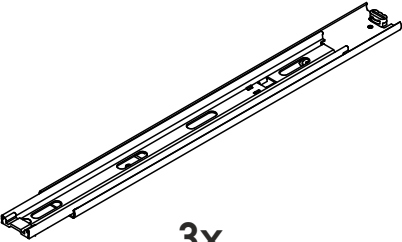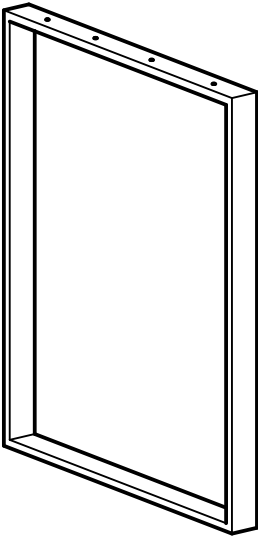
A01  2x	A02  20x	A03  20X	A04  20x
		A05  4x	
A06  30x	A07  4x	A08  3x	
A09  2x	A10  4x	A12  1x	
A11  2x			

caisson


01

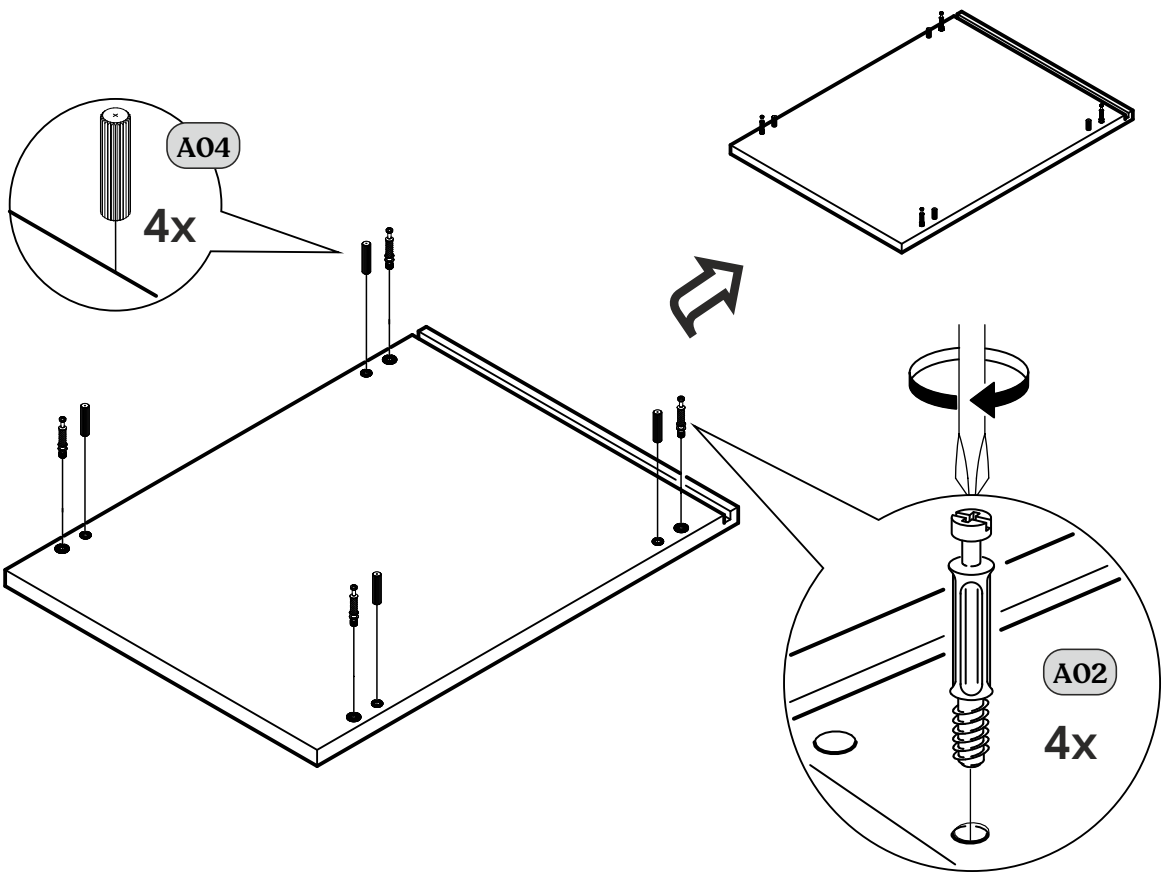


02

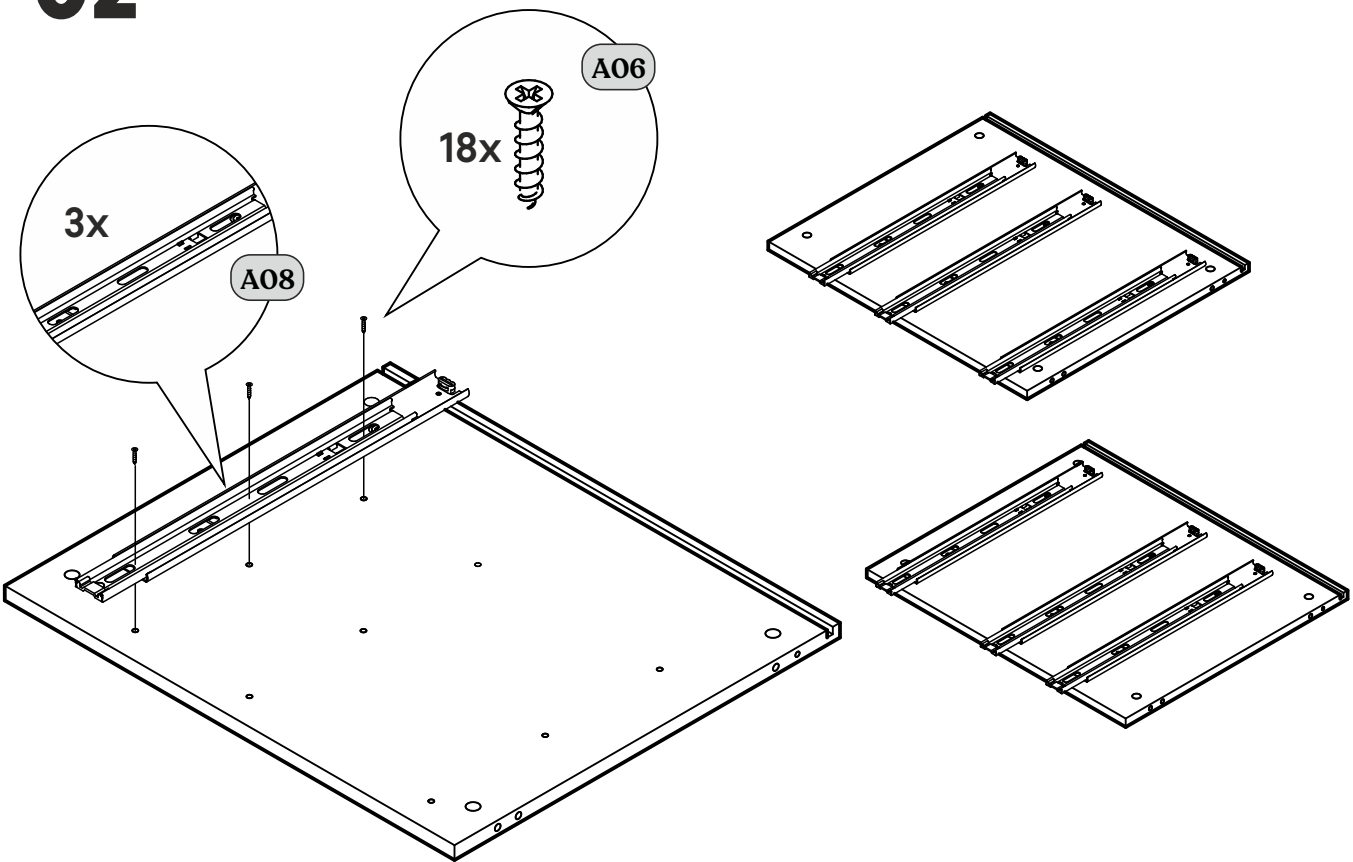


03

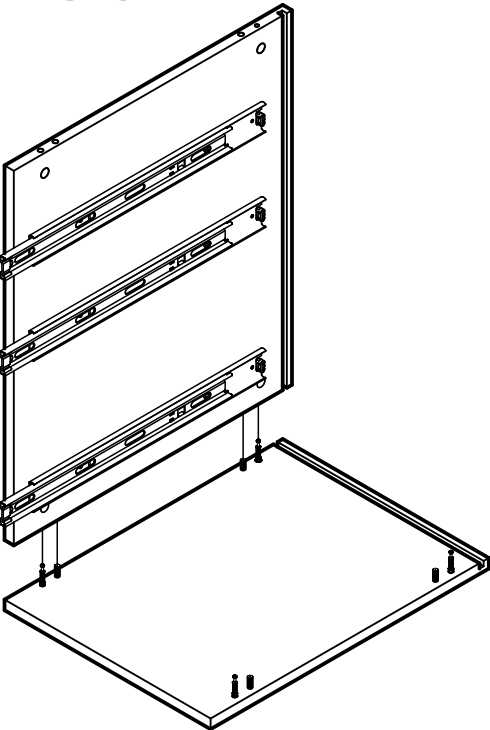


04

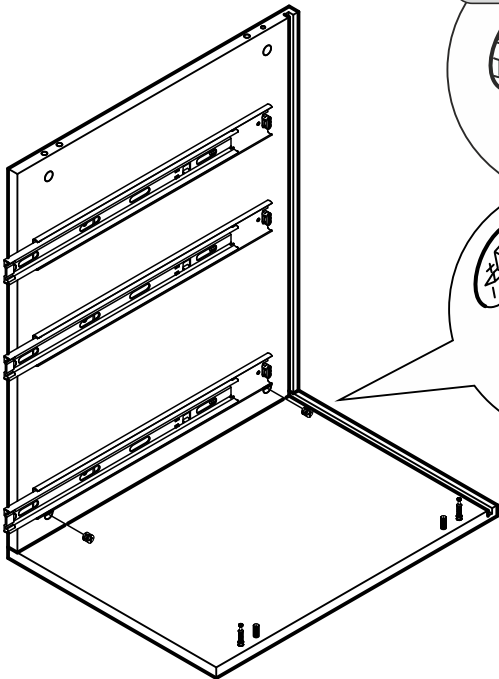


05

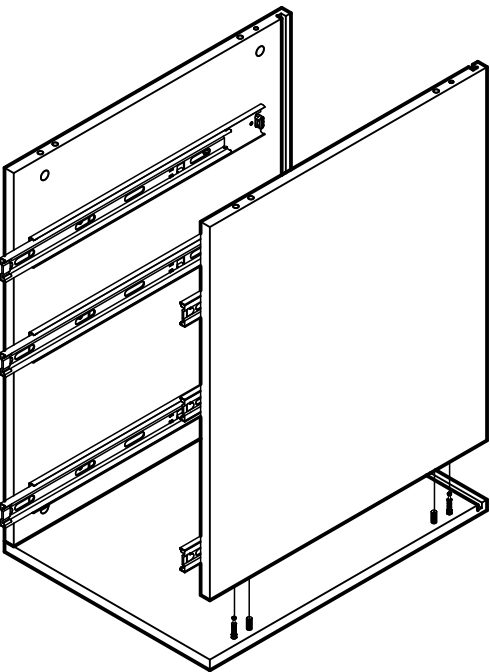


06

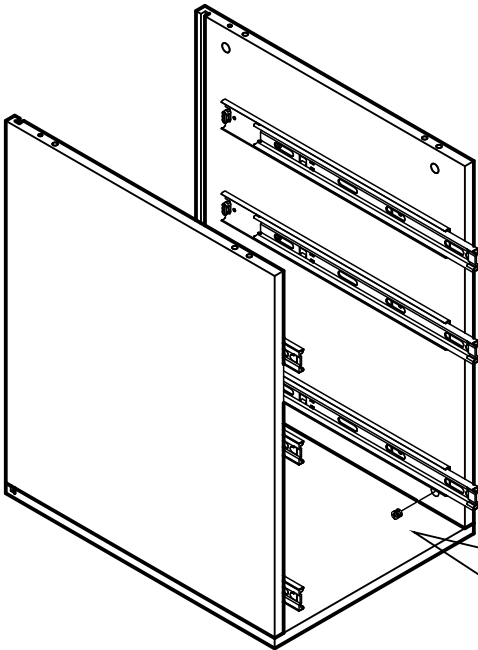


07

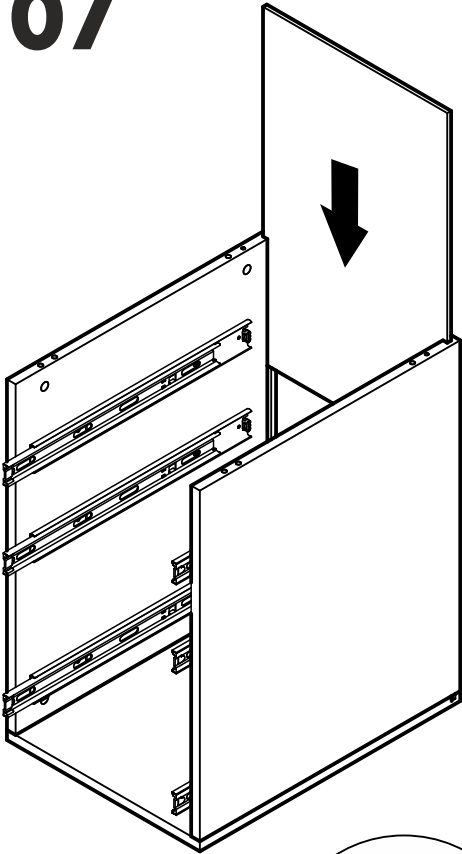


08

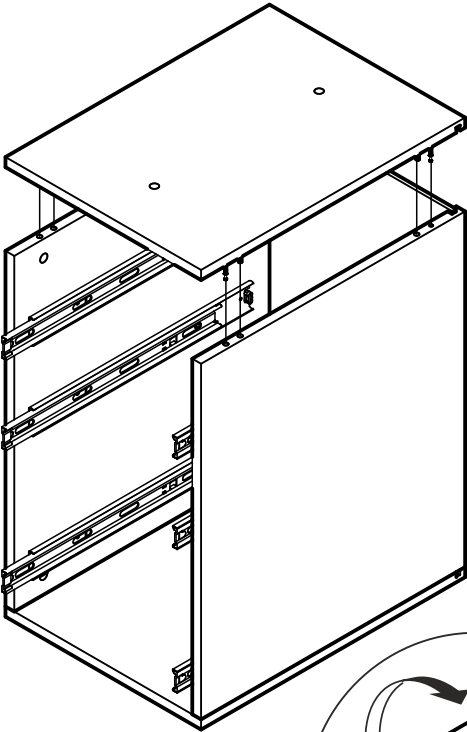


09

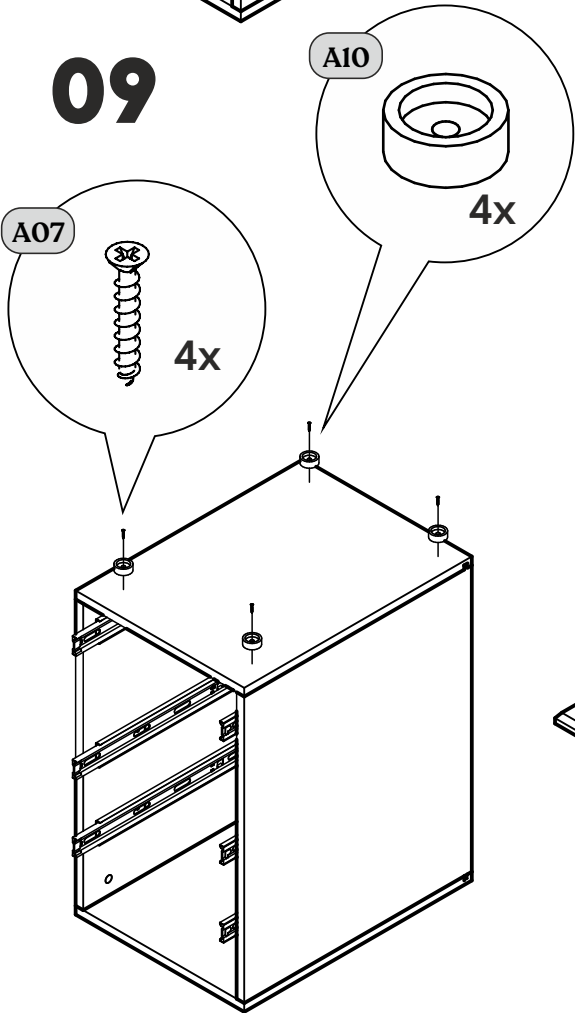

10

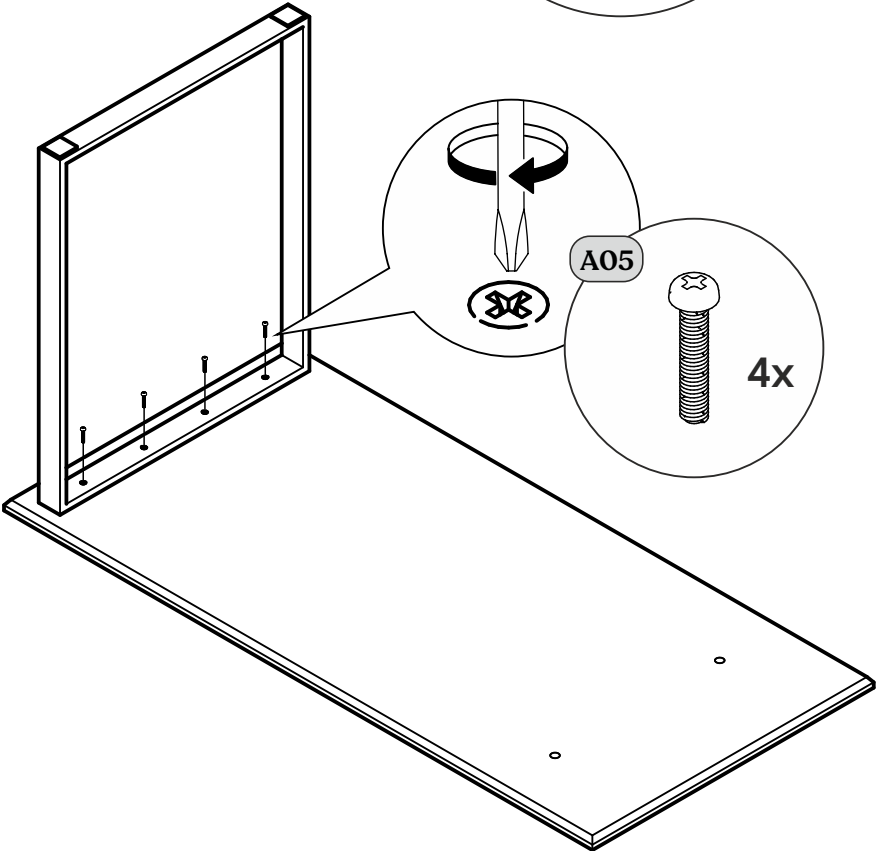


11

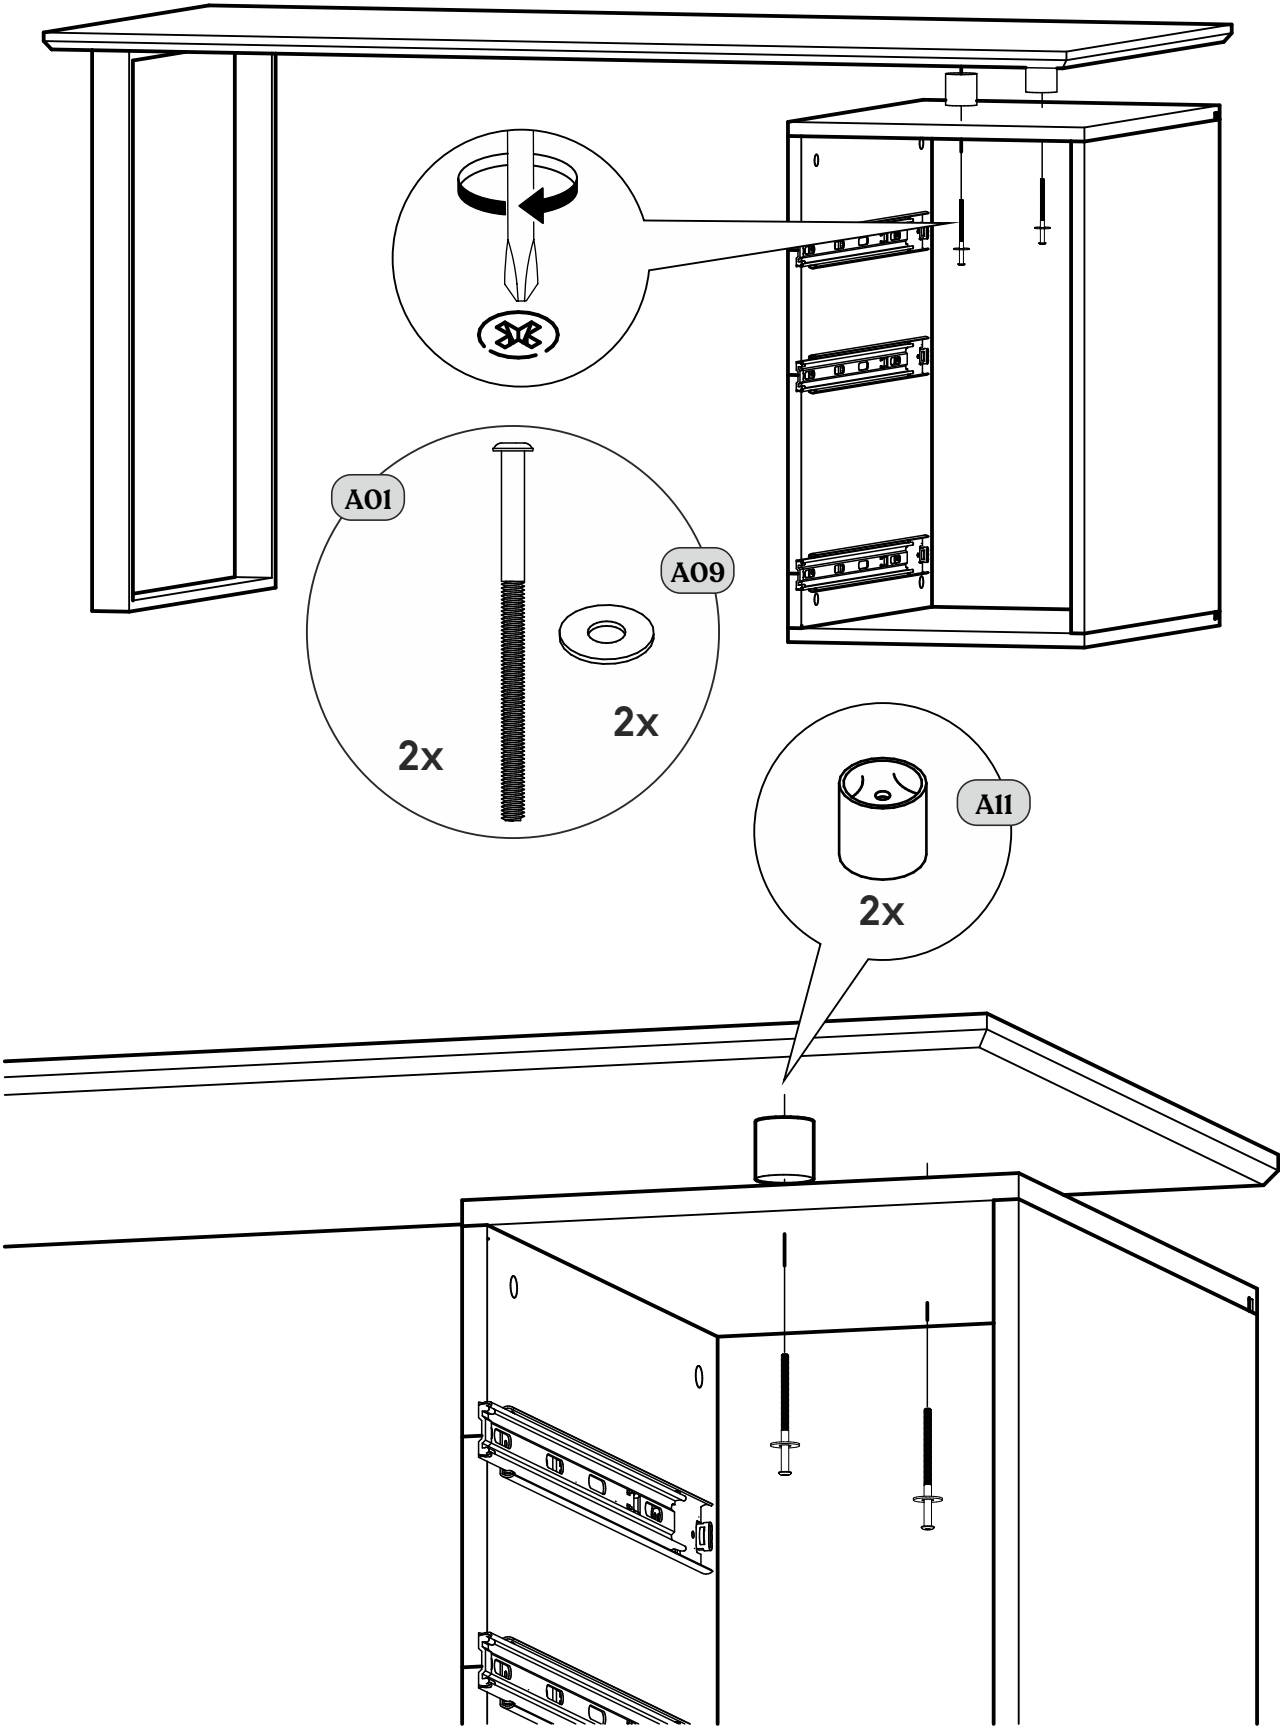


drawers


12

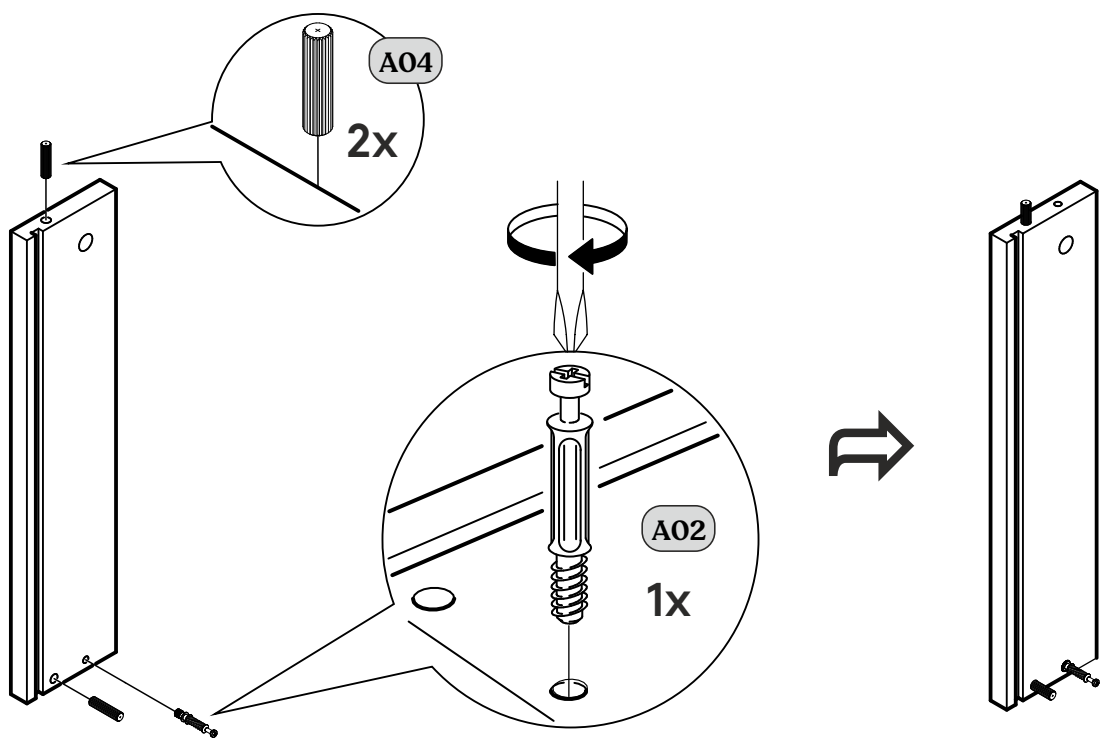


13

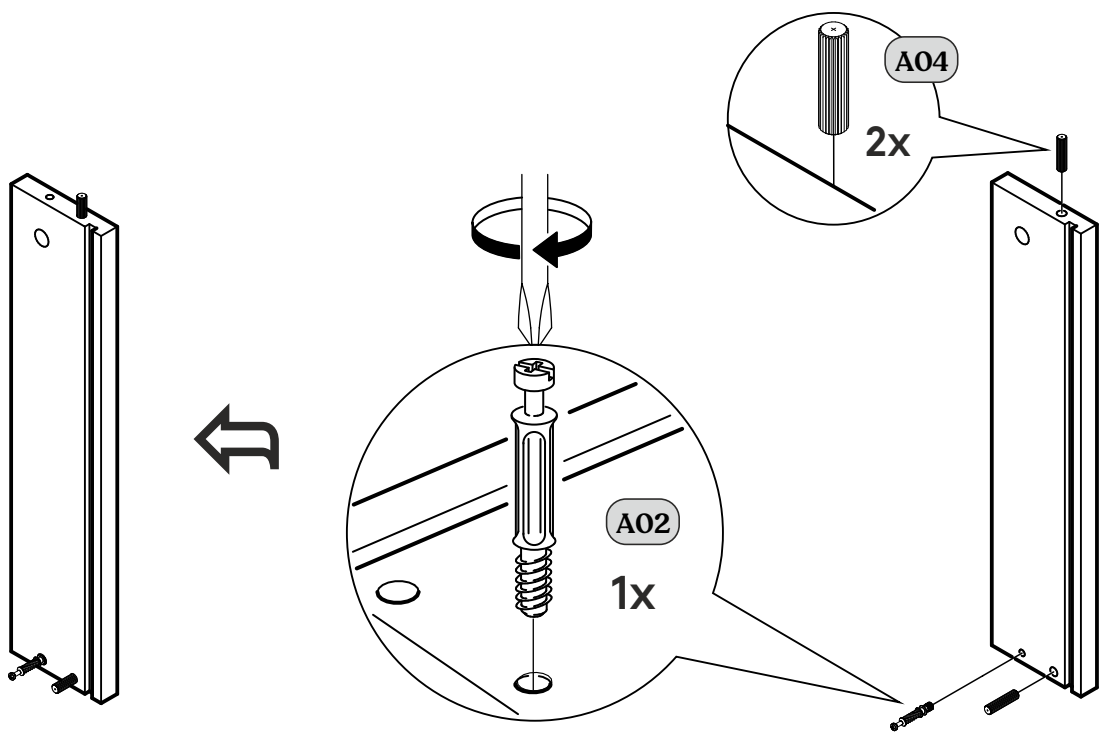


14

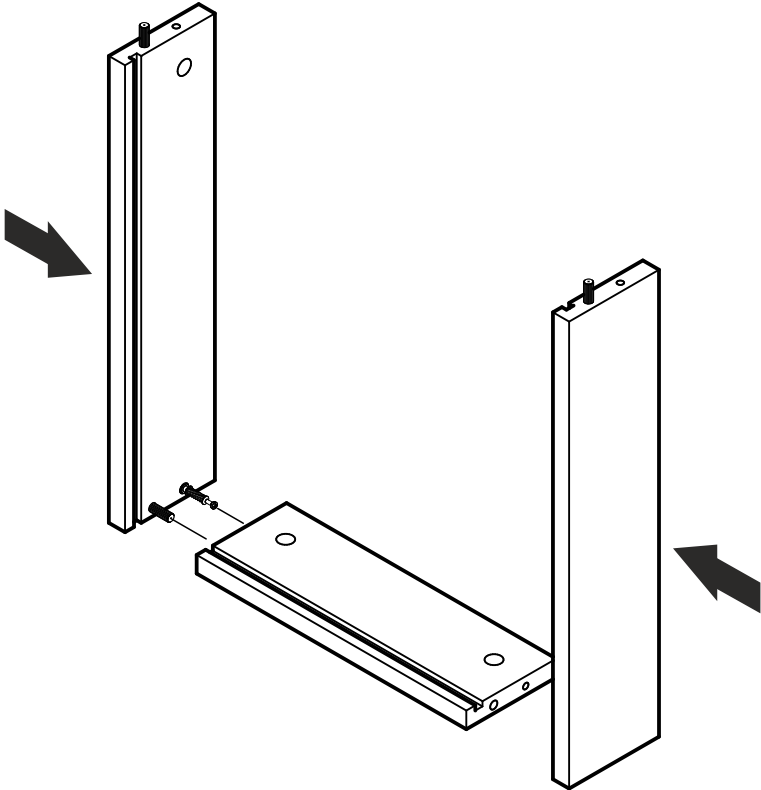


15

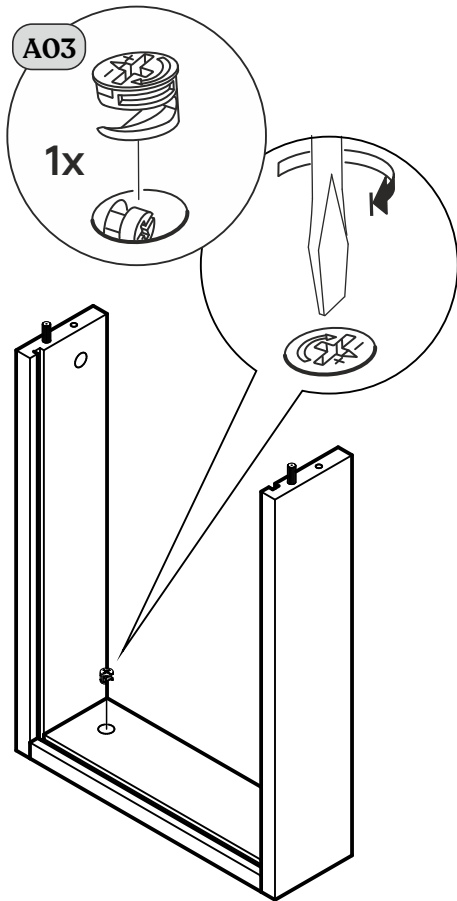


16

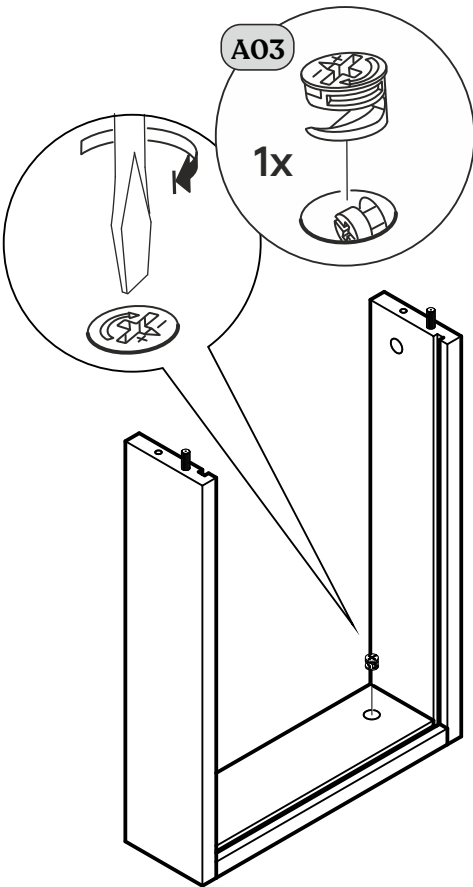


17

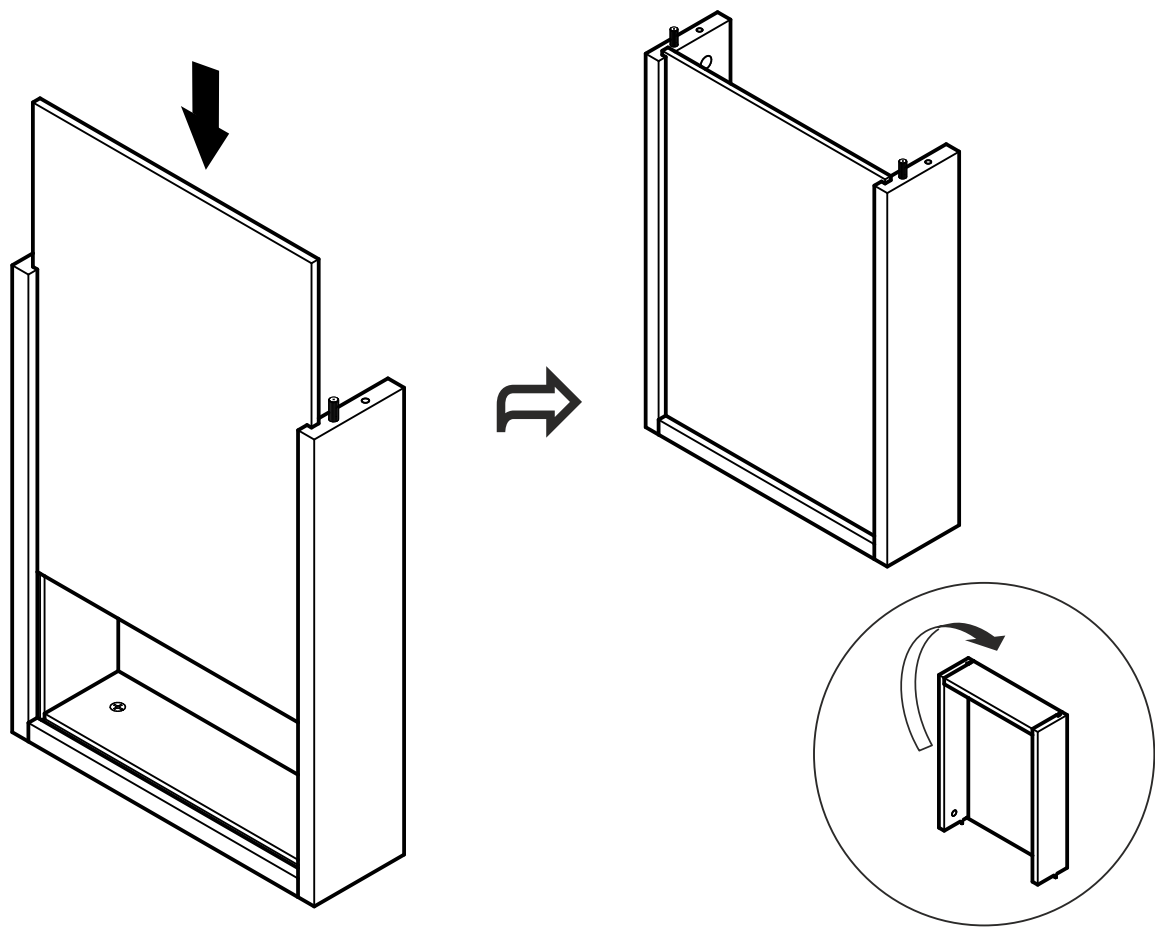


18

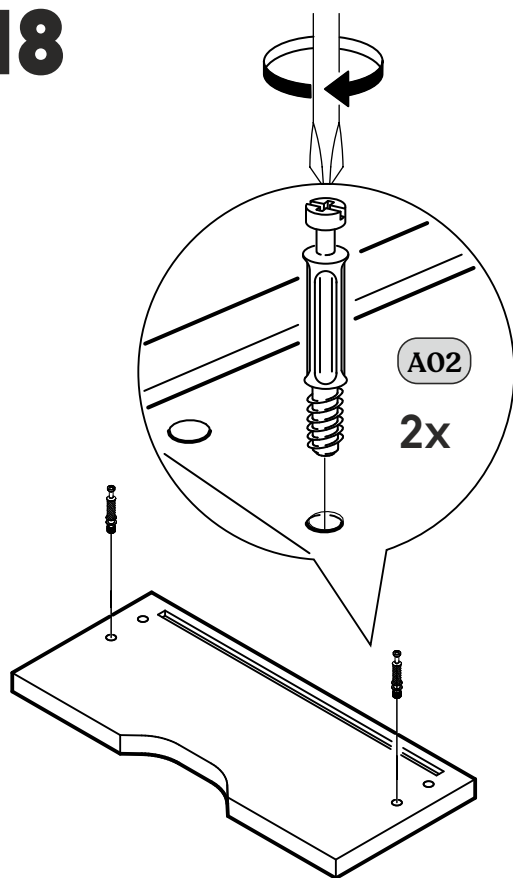


19

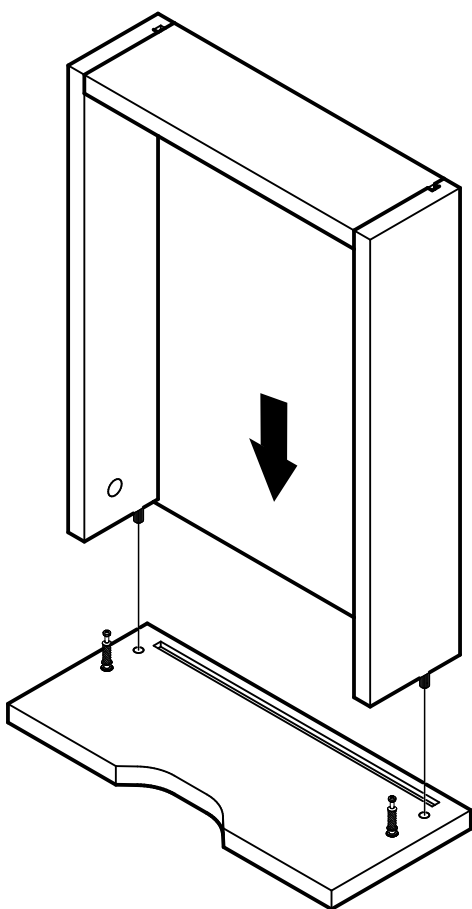


20

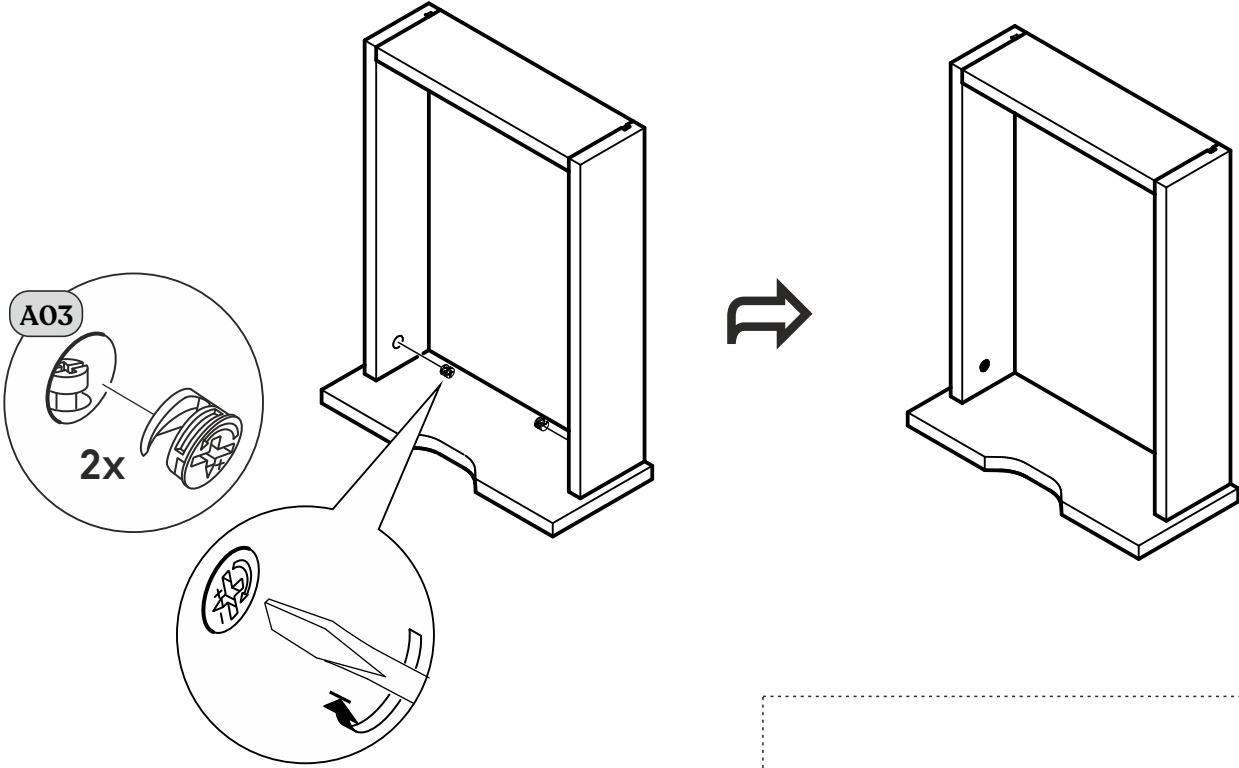


21

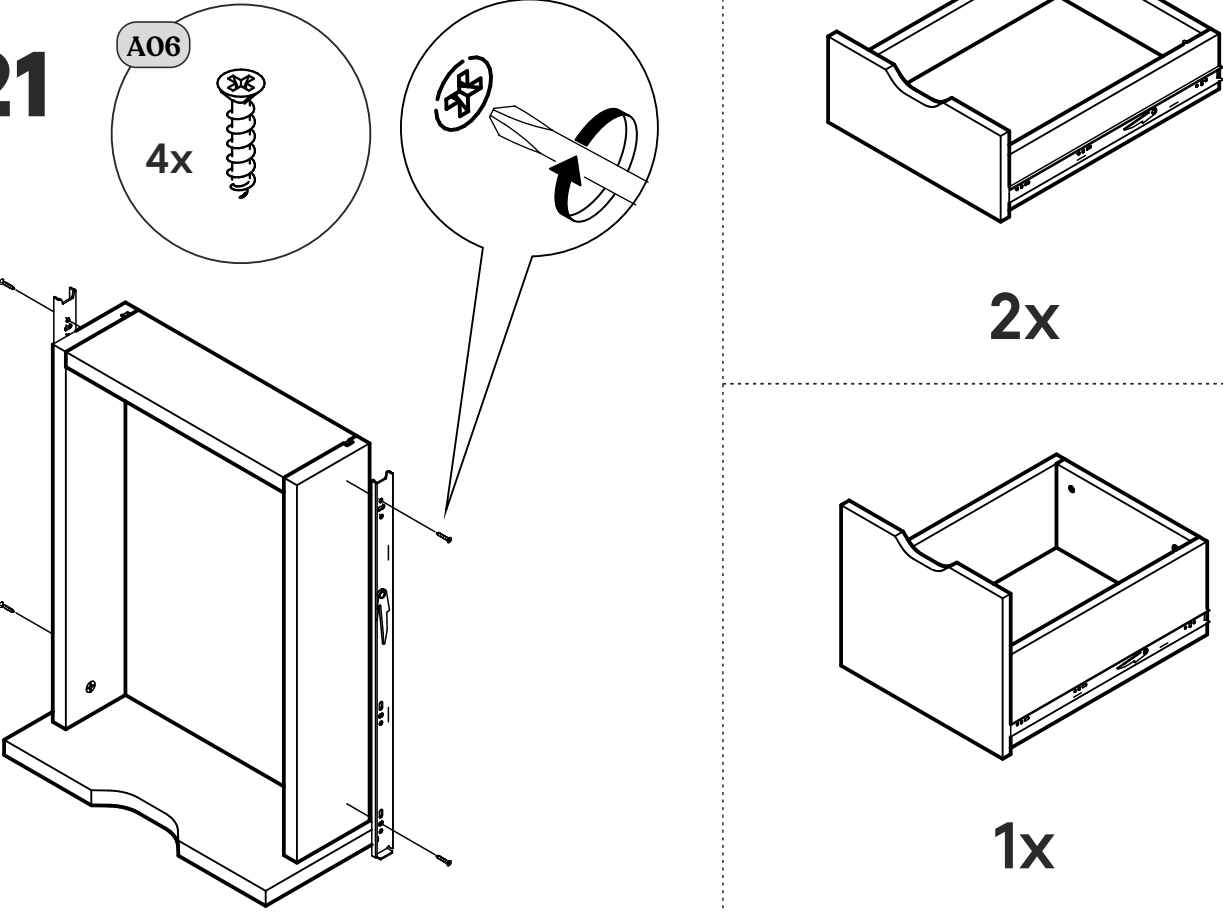


22

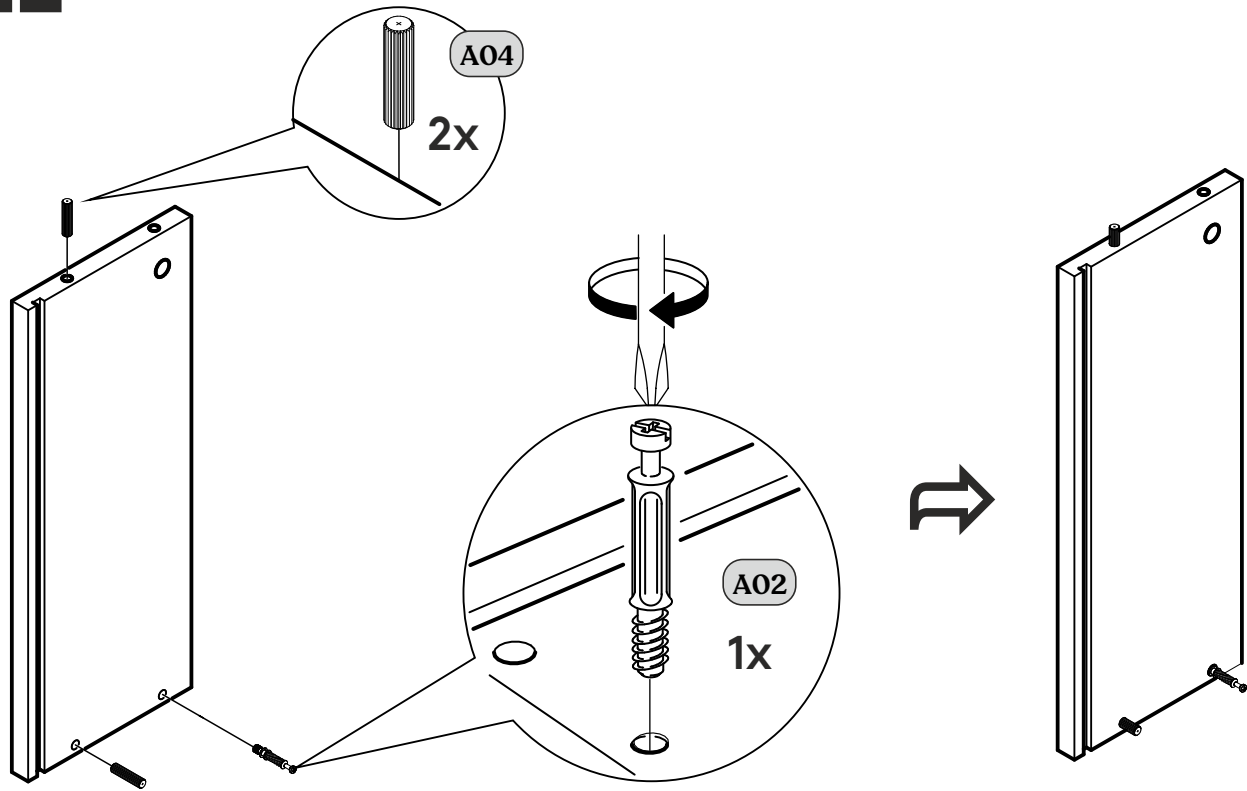


23

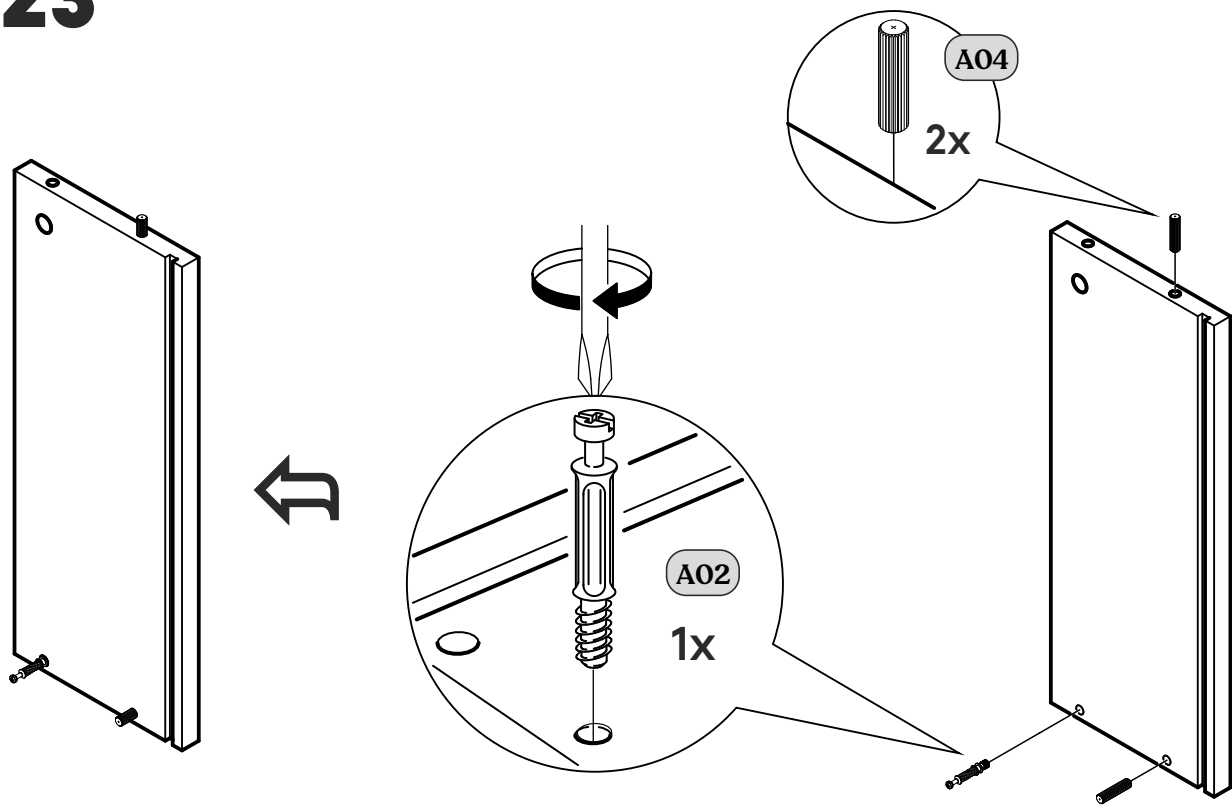


24

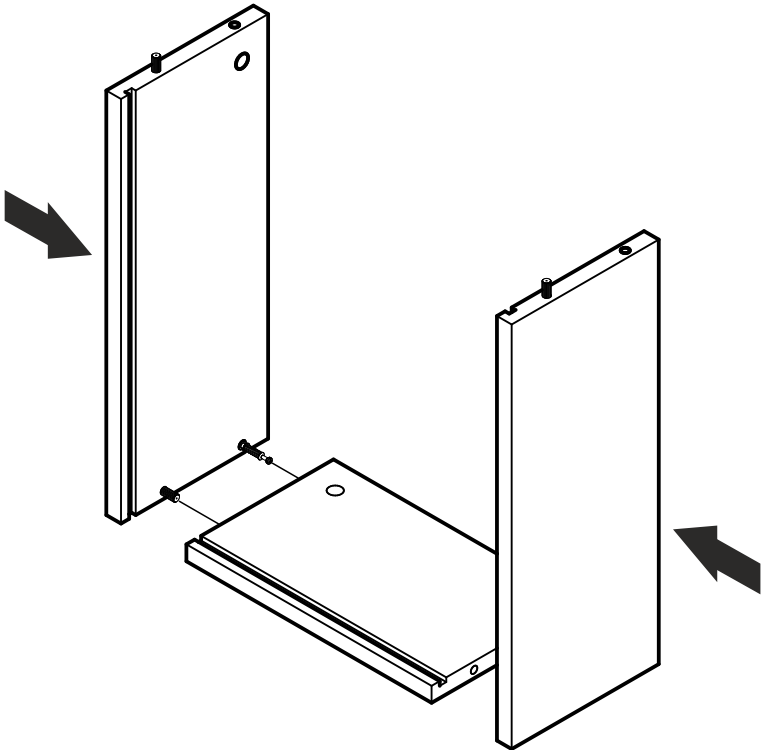




25

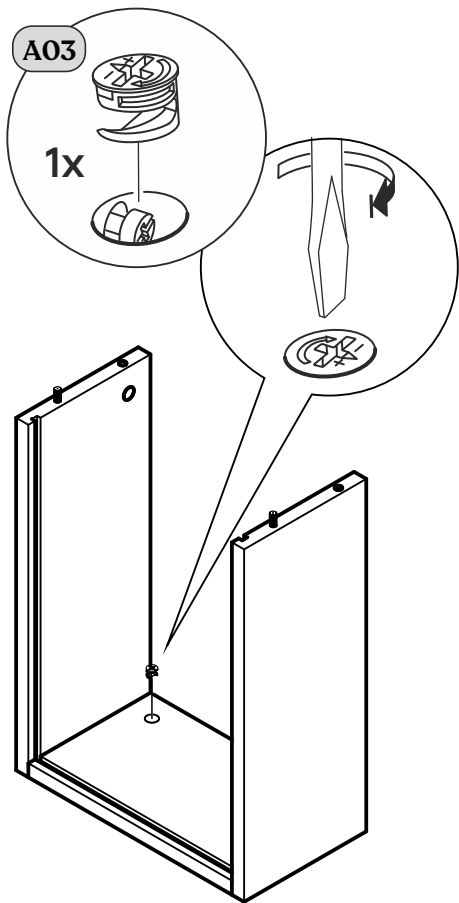


26

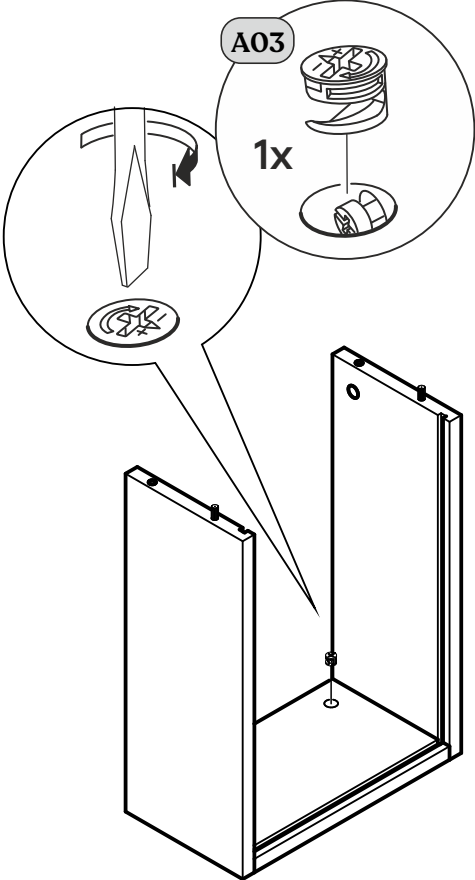


27

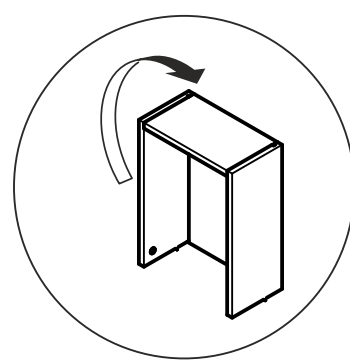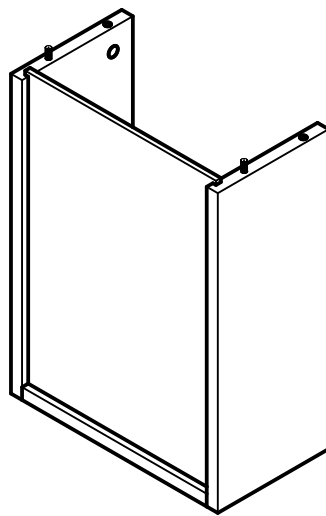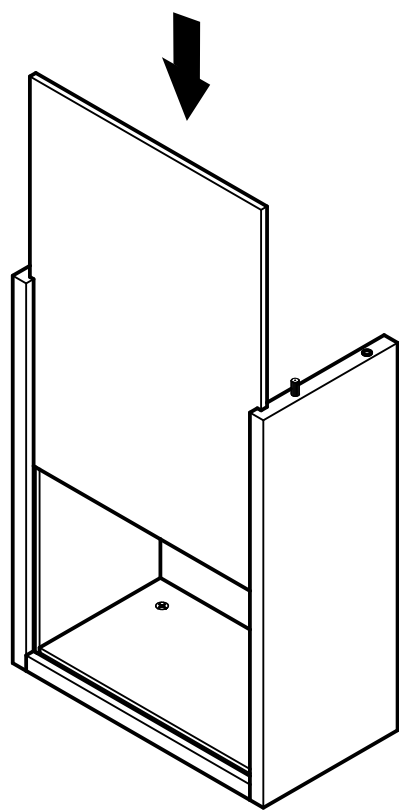


28

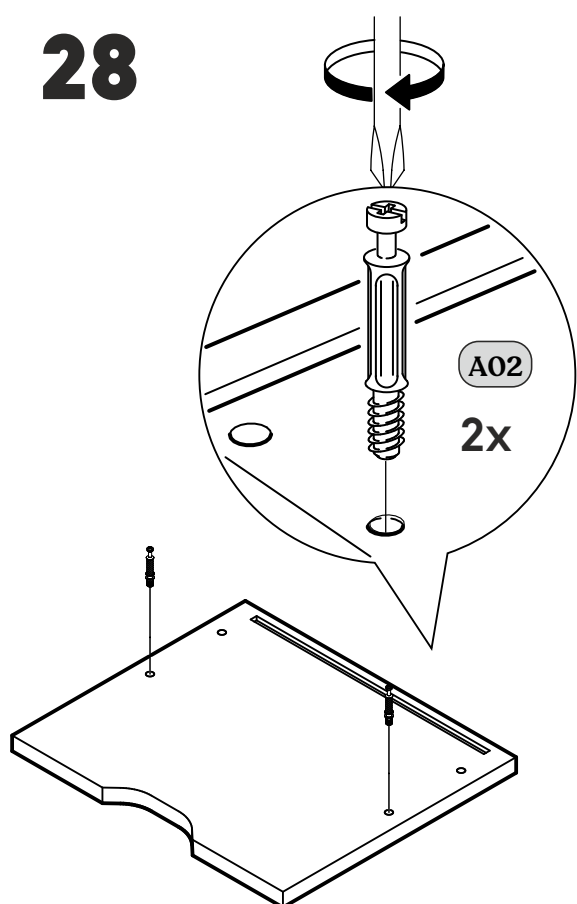


29

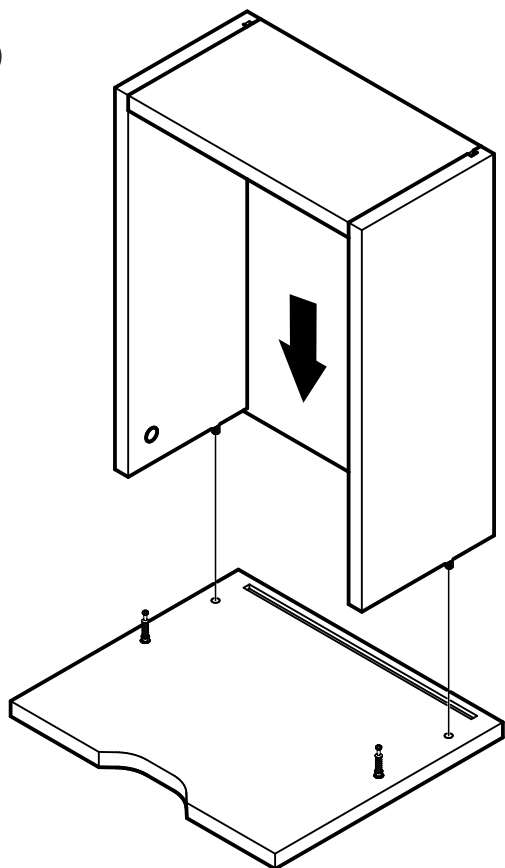

30

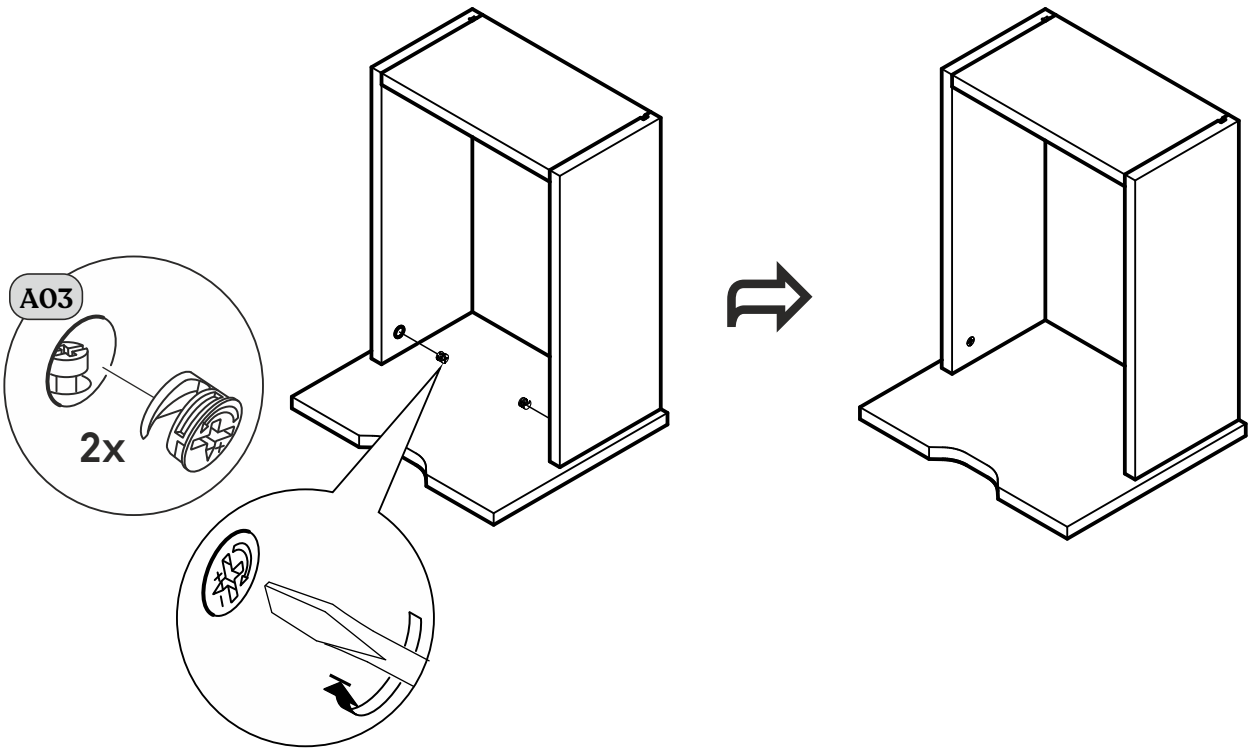

31

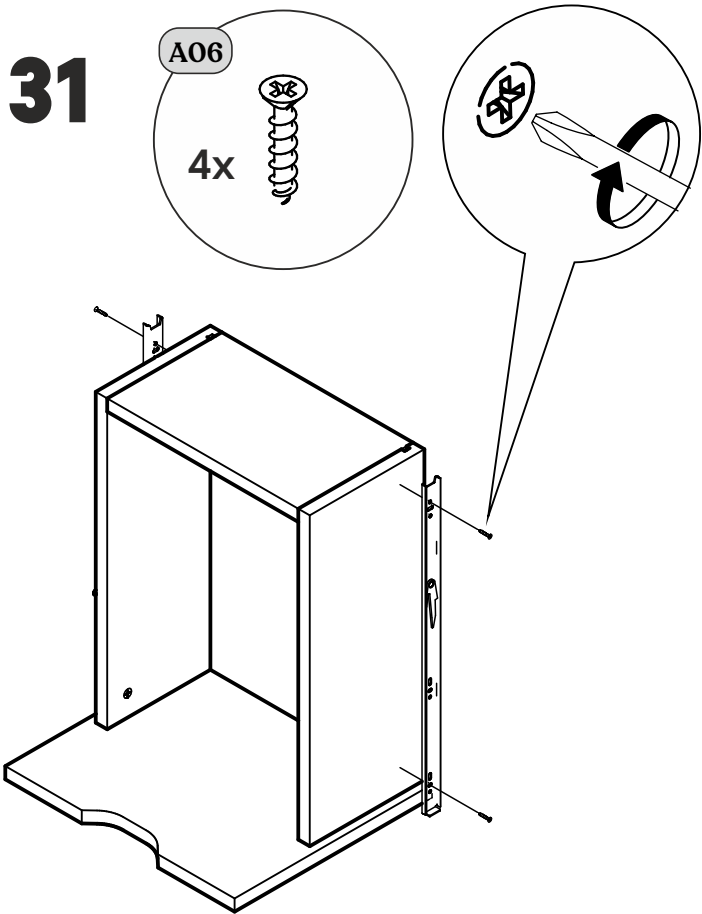

32

